


5059_Speaker Hecno (EN)

User manual



It is recommended to read this user manual carefully and keep it for future reference.


Product Overview:

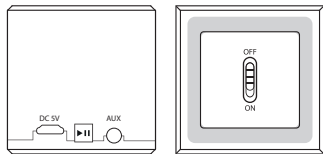

1. Specifications:

- Bluetooth specifications: Bluetooth Version 2.1 + EDR.
- USB charging voltage: DC 5V.
- Rechargeable Li-Polymer battery included.
- Operating distance: < 10M.
- Frequency: 200Hz – 20KHz.
- Sensitivity: 85db ± 2db.
- Output: 4Ω, 3W.
- Audio cable Jack connection 3.5mm included. Cable USB and Micro USB connection.

Descripción del Producto:

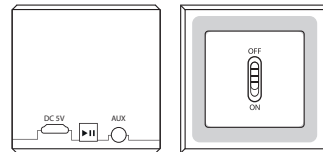

1. Especificaciones:

- Especificaciones del Bluetooth: Bluetooth Versión 2.1 + EDR.
- Voltaje de recarga del USB: DC 5V.
- Batería recargable de Polímeros de Litio incluida.
- Distancia de funcionamiento: <10M.
- Frecuencia: 200Hz – 20KHz.
- Sensibilidad: 85db ± 2db.
- Salida: 4Ω, 3W.
- Cable de audio conexión Jack 3.5mm incluido. Cable conexión USB y Micro USB.

2. Botones / Outer appearance:

1. OFF: To power Off the speaker.
2. ON: Bluetooth Mode.
3. ►||: Play / Pause / Call button (To Pick up / Hang up / Dial the last outgoing phone call).
4. MIC: Serves as microphone during hands-free call.
5. Micro USB port: To connect with Micro USB cable to charge.
6. Jack connection port. AUX function.

3. Functions:

Power On / Off:

Switch button to "On" position to activate the Bluetooth function.

Bluetooth Pairing:

Before using the Bluetooth speaker, you must pair it with a Bluetooth enabled device.

1. When the speaker is powered on, it will enter Bluetooth mode, the Blue LED light will flash quickly.
2. From the Bluetooth menu of your device, search for new devices and select "5059" to pair with your device.
3. Once they are paired successfully, you will hear a confirmation sound.
4. If the speaker is turned off, the device and the speaker will need to be reconnected.

2. Botones / Apariencia externa:

1. OFF: Para encender/apagar el altavoz.
2. ON: Modo Bluetooth.
3. ►||: Reproducir / Pausa / Responder / Botón de llamada (Responder / Colgar / Marcar la última llamada de salida).
4. MIC: Sirve como micrófono durante una llamada en manos libres.
5. Puerto Micro USB: Conecte el cable Micro USB para cargar la batería
6. Puerto conexión Jack. Función AUX.

3. Funciones:

Encender / Apagar:

Sitúe el botón de encendido en la posición "ON" para activar las funciones Bluetooth del altavoz, cambie el botón de encendido a la posición "OFF" para apagar el altavoz.

Asociar Bluetooth:

Antes de usar el altavoz Bluetooth debe asociarlo con un dispositivo con el Bluetooth habilitado.

1. Cuando el altavoz esté encendido entrará en el modo Bluetooth, la luz LED azul parpadeará rápidamente.
2. Desde el menú Bluetooth de su dispositivo busque nuevos dispositivos y seleccione "5059" para asociarlo a su teléfono.
3. Una vez asociados correctamente oír un sonido de confirmación.
4. Si el altavoz se apaga necesitará realizar una reconexión entre el dispositivo y el altavoz.

Calls:

When there is an incoming call, press the call button "►||" to pick up / hang up the phone call.

Audio Input (Line in):

Insert the Jack connection cable into the Jack connection port, and insert the 3.5mm jack into your mp3 / mp4 player / mobile phone or other compatible device to play your music.

Press button "►||" to mute or unmute the speaker.

Charging:

Plug Micro USB cable into Micro USB port and connect USB cable to computer / AC adapter to charge the speaker.

4. Troubleshooting.

Fault	Solutions
Unable to pair up with other devices.	1. Check whether the speaker is still in the process of search or switch it off and on again. 2. There are too many Bluetooth devices in the proximity that cause difficulty in connection. Please turn them off.
The sound is rather low or distorted.	1. Check the Bluetooth device's volume and then adjust it to a n appropriate level. 2. Recharge the battery.
The music stops from time to time.	1. Check whether the speaker's effective transmission range is exceeded or if there is an obstacle standing between the speaker and other Bluetooth devices.
The Bluetooth indicator remains off.	1. The battery power may too low. Recharge the battery. 2. Turn device off and on again.

Llamadas:

Cuando se produzca una llamada entrante presione el botón de llamada "►||" para responder / colgar ésta.

Entrada de Audio (Line in):

Conecte el cable de conexión Jack en el Puerto conexión Jack del altavoz e inserte la clavija jack 3.5mm en su reproductor mp3 / mp4 / teléfono móvil u otro dispositivo compatible para reproducir su música.

Presione el botón "►||" para silenciar o activar el sonido del altavoz.

Carga:

Conecte el cable Micro USB en el Puerto Micro USB y conecte el cable USB a su ordenador / adaptador de corriente alterna para cargar el altavoz.

4. Solución de problemas.

Fallo	Soluciones
Imposible conectarse con otros dispositivos.	1. Revisar si el altavoz sigue en el proceso de búsqueda o apagarlo y encenderlo nuevamente. 2. Hay demasiados dispositivos Bluetooth en las proximidades que causan dificultad en la conexión. Por favor apagarlos.
El sonido es bajo o distorsionado.	1. Revisar el volumen del dispositivo Bluetooth y ajustarlo a un nivel adecuado. 2. Recargar la batería.
La música se detiene de vez en cuando.	1. Revise si la distancia efectiva de transmisión del altavoz es excesiva o si existe algún obstáculo entre el altavoz y los dispositivos Bluetooth.
El indicador de Bluetooth se mantiene apagado.	1. Sugiere que el nivel de la batería está muy bajo, reintente una vez recargado. 2. Encender de nuevo.

5. Safety instructions / Precautions:

1. Store and use this product at an ambient temperature.
2. Do not expose this product to the rain or damp conditions.
3. Prevent this product from falling that could result in serious damage.
4. Do not dismantle, repair or modify this product by yourself.
5. In order to avoid any risk, do not dispose of this product inappropriately or toss it into the fire as there is a built-in Lithium battery.
6. Clean the speaker with a dry cloth.
7. Do not place this item near sources of heat or expose to direct sunlight.
8. Do not insert any metal object into this device, as there is a risk of causing a short circuit in the unit.
9. Do not repair the unit by yourself, contact an authorized specialist.



This symbol both in the product and its user manual indicates that at the end of the device's electrical life, it should be recycled separately from your household waste. There are adequate means to dispose of this material for proper recycling. For more information, contact your local authorities.



MADE IN PRC

5059_Altavoz Hecno (ESP)

Manual de instrucciones



Recomendamos que lea detenidamente este manual de instrucciones y lo conserve para futuras consultas.



This symbol both in the product and its user manual indicates that at the end of the device's electrical life, it should be recycled separately from your household waste. There are adequate means to dispose of this material for proper recycling. For more information, contact your local authorities.



MADE IN PRC