

# 21940 - ADAPTADOR ENCHUFES WANDO


## FRONT PART

### 21940 - Adaptador Enchufes Wando Manual de instrucciones (Esp)



Recomendamos que lea detenidamente este manual de instrucciones y lo conserve para futuras consultas.

#### Descripción del Producto:

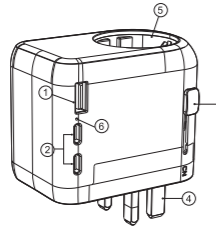

- ① Puerto USB A1
- ② Puertos USB C
- ③ Deslizador
- ④ Adaptadores US/CN/UK/DE
- ⑤ Enchufe Schuko CEE7/7
- ⑥ Indicador LED



LED type: normal operation  
LED does not light:  
1. Possible overcharge, disconnect one device and check status indicator again.  
2. Fuse burn-out, please check the fuse.

#### Especificaciones:

Clasificación para US: 125V ~ 60Hz, 10A Max, 1250W Max.  
Clasificación para DE/UK/CN: 250V ~ 50Hz, 10A Max, 2300W Max.  
Modo salida uso individual:  
Salida USB C1: 5-20V  $\equiv$  3-2.25A, 45W  
Salida USB C2: 5V  $\equiv$  2.1A, 10.5W  
Salida USB A1: 5V  $\equiv$  2.1A, 10.5W  
Modo salida multiuso:  
Salida USB C1: 5-20V  $\equiv$  2.4-1.35A, 27W  
Salida USB C2 + USB A1: 5V  $\equiv$  2.1A, 10.5W Max  
Temperatura de funcionamiento: 0°C - 35°C  
El adaptador no convierte el voltaje  
Fusible y toma de tierra incluidos

#### Enchufes aplicables

El adaptador puede aceptar los enchufes del tipo E, F, C, para Francia, Alemania, etc.

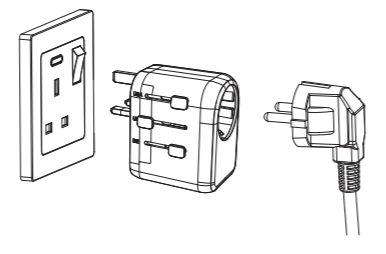


El adaptador puede enchufarse en tomas de tipo B, G, I, F, E. Adecuado para EE.UU., Canadá, Reino Unido, China, Alemania, Francia, etc.



#### Cómo usar el adaptador


##### Atención:

- Por favor, asegúrese de que el botón se restablece cuando el botón se empuja hacia fuera y se retrae a la parte inferior, y si el botón no se restablece, significa que el enchufe no está en su lugar y afectará el uso normal.
- Sólo se puede utilizar un tipo de clavija a la vez deslizando el mando de selección, las demás clavijas se bloquean automáticamente.

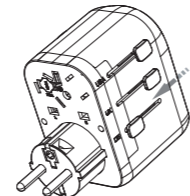


##### Uso DE (Europa):

Presione ligeramente el botón y deslicelo hacia abajo para desenchufarlo completamente, tal como se muestra. Recuperar el enchufe: mantenga pulsado el botón «DE» para liberar y seguir tirando hacia arriba y luego suelte el botón, entonces el botón se restablecerá y bloqueará el enchufe.

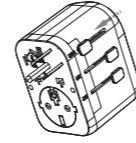


##### Uso USA:

Siga el mismo procedimiento que el anteriormente explicado con el adaptador USA.

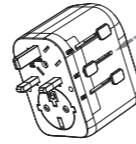

##### Uso UK:


Siga el mismo procedimiento que el anteriormente explicado con el adaptador UK.

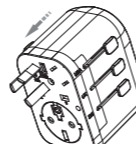

##### Uso CN:

Siga el mismo procedimiento que el anteriormente explicado con el adaptador CN.

#### Sustituir el fusible

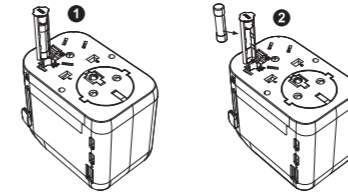

- Presione la caja de fusibles marcada como «fuse» con un objeto duro y, a continuación, extraiga el fusible, tal y como se muestra en la figura 1.
- Inserte un fusible nuevo en la caja de fusibles y, a continuación, inserte la caja de fusibles en el producto, como se muestra en la figura 2.  
Especificación del fusible:  
BS1362, 240Vac, Max 10A, 6.3\*25.4mm

#### ⚠ Advertencias

- Este adaptador no convierte voltaje en corriente alterna. Sólo es un convertidor de voltaje en la salida del puerto USB (corriente continua).
- Para evitar posibles daños en sus equipos y riesgos para su salud, asegúrese de que la potencia de salida que intenta usar tiene el voltaje apropiado antes de usar el adaptador.
- Cada país tiene sus propias regulaciones sobre el uso de los adaptadores de viaje. Por favor, revíselo antes del uso.
- Nunca desmonte el adaptador. Si lo hace, pueden existir riesgos de quemaduras o descargas eléctricas, o puede romper el producto.
- Evite caídas que puedan generar daños serios en el adaptador y, en ningún caso, intente reparar la unidad por sí mismo, contacte con un especialista.
- No exponga el producto a ambientes húmedos. Su uso es sólo para interior.

- Este adaptador no es un juguete, manténgalo fuera del alcance de los niños.
- Asegúrese siempre de que el adaptador está desenchufado cuando no esté en uso. El adaptador podría ser peligroso y provocar una descarga eléctrica si es usado incorrectamente.



El símbolo de referencia tanto en el producto como en su manual de usuario, indica que al final de la vida útil de los aparatos eléctricos y/o electrónicos, éstos deberán reciclarse por separado de sus residuos domésticos. Existen medios adecuados para recoger este tipo de material para su correcto reciclaje.  
Para obtener más información, póngase en contacto con la autoridad local.

MKTO CATAL IMPORTACIONES S.L. B04267225  
Ctra. de Huércal-Overa, s/n, 04640, Pulpí, Almería, Spain.  
productsafety@makito.es


## BACK PART

### 21940 - Plug Adapter Wando User Manual (Eng)



It is recommended to read this user manual carefully and keep it for future reference.

#### Product overview:

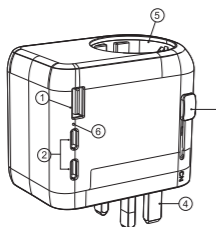

- ① USB-A1 Port
- ② USB-C2/C1 Ports
- ③ Slider
- ④ US/CN/UK/DE Plugs
- ⑤ Schuko CEE7/7
- ⑥ LED Indicator



LED type: normal operation  
LED does not light:  
1. Possible overheat. Unplug one device and check status indicator again.  
2. Fuse burn-out, please check the fuse.

#### Specifications:

Rating for US: 125V ~ 60Hz, 10A Max, 1250W Max.  
Rating for DE/UK/CN: 250V ~ 50Hz, 10A Max, 2300W Max.  
Single port Output mode:  
USB C1 Output: 5-20V  $\equiv$  3-2.25A, 45W  
USB C2 Output: 5V  $\equiv$  2.1A, 10.5W  
USB A1 Output: 5V  $\equiv$  2.1A, 10.5W  
Multi Output mode:  
USB C1 Output: 5-20V  $\equiv$  2.4-1.35A, 27W  
C2 + USB A1 Output: 5V  $\equiv$  2.1A, 10.5W Max  
Operating Temperature: 0°C - 35°C  
Plug do not convert the voltage.  
Fuse and grounded included

#### Applicable Outlets

Adapter can accept Type E,F,C plugs.Suit for France, Germany etc.

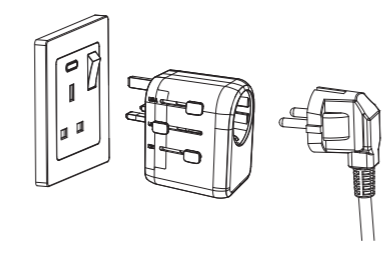


Adapter can plug into Type B, G, I, F, E outlets. Suit for USA, Canada, UK, China, Germany, France etc.



#### How to use the adapter


##### Attentions:

- Please make sure that the button resets when the button is pushed out and retracted to the bottom, and if the button does not reset, it means that the plug is not in place and will affect normal use.
- Only one plug-type of pin can be used at a time by sliding the selection knob, the other plug-pins are automatically locked.

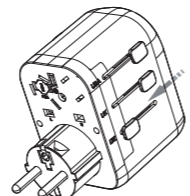


##### Use DE (Europe) Plug:

Press the button lightly and slide it down to unplug it completely, as shown. Retrieve the plug: press and hold the "DE" button to release and keep pulling up and then release the button, then the button will reset and lock the plug.

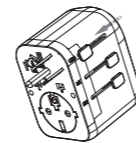


##### Use USA Plug:

Follow the same procedure as explained above with the USA plug.

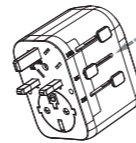

##### Us UK Plug:


Follow the same procedure as explained above with the UK plug.

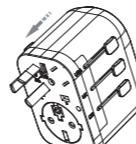

##### Use CN Plug:

Follow the same procedure as explained above with the CN plug.

#### Replacement of the fuse

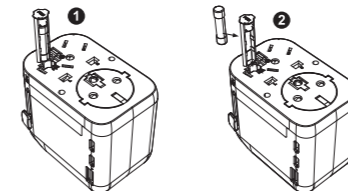

- Tap up the fuse box marked "fuse" with a hard object, and then take out the fuse, as shown in Figure 1.
- Insert a new fuse into the box, and then insert the fuse box into the product, as shown in Figure 2.  
Fuse Specification:  
BS1362, 240Vac, Max 10A, 6.3\*25.4mm

#### ⚠ Warnings

- This adapter does not convert voltage in alternating currents. It is only a voltage converter in the USB output port (direct current).
- To avoid possible damage to your items or risk of accident, ensure that the out power which you are trying to use has the correct voltage before using this adapter.
- Every country has its own regulations about the use of travel adapters. Check them carefully before use.
- Never disassemble the adapter as you may be at risk of burns, electric discharges, or you may break the item.
- Avoid dropping the item as it could seriously damage the adapter. Never try to repair this unit yourself, contact a specialist.
- Do not expose the item to damp conditions. For indoor use only.

- This adapter is not a toy. Keep away of children.
- Always ensure that the adapter is unplugged when not in use. This adapter could be dangerous and could cause an electric discharge if used incorrectly.



This symbol both in the product and its user manual indicates that at the end of the devices electrical life, it should be recycled separately from your household waste. There are adequate means to dispose of this material for proper recycling. For more information, contact your local authorities.

MKTO CATAL IMPORTACIONES S.L. B04267225  
Ctra. de Huércal-Overa, s/n, 04640, Pulpí, Almería, Spain.  
productsafety@makito.es