

5246_CAMARA DEPORTIVA KOMIR

5246_Cámara Deportiva (Esp) Manual de Instrucciones



Recomendamos que lea detenidamente este manual de instrucciones y lo conserve para futuras consultas.

1. Vista General.


Antes de usar este dispositivo lea atentamente y siga las instrucciones de uso e instalación.

La Cámara deportiva Komir te permitirá grabar tus mejores momentos en alta definición y compartir tus experiencias más divertidas.

Dispone de todos los accesorios necesarios para disfrutar de tus deportes preferidos y sacar el máximo partido a la cámara.

Características principales:

- Carcasa estanca para sumergir la cámara hasta 30m de profundidad.
- Pantalla de cristal líquido de 2 pulgadas.
- Batería extraíble de 900mAh de ion de litio fácil de reemplazar.
- Hasta 90 minutos de tiempo de grabación.
- Grabación de video y capturas de foto durante la carga.
- Objetivo gran angular 120° de alta definición.
- Compatible con tarjetas de memoria de hasta 32GB.
- Video calidad real de 720 píxeles (p).
- Fotos de hasta 12 Megapíxeles (Mp).
- Aspecto compacto y disponible en negro, plata y blanco.
- Configurable en 12 idiomas.

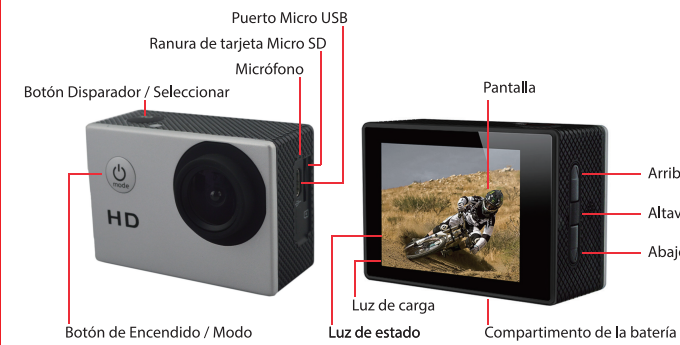


Para abrir la carcasa, presione a la vez en el sentido de las flechas.


Accesorios incluidos:



Montaje de la cámara:

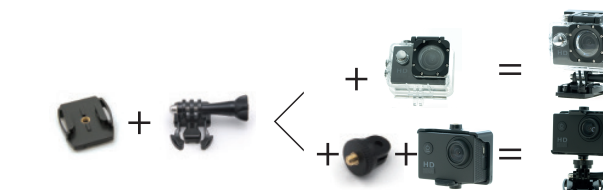

Attaching your camera:

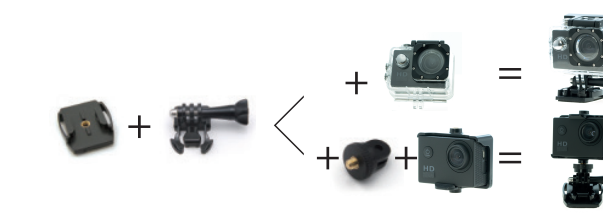

2. Modo de Uso:

Antes de usar la cámara por primera vez cargue la batería completamente. Conecte el cable Micro USB al puerto USB de su ordenador o a la pared mediante un adaptador de corriente con entrada USB.

Presione el botón de Encendido / Modo durante unos segundos para empezar a usar su cámara y poder realizar videos, en la esquina superior izquierda aparece el icono .

Vuelva a presionar el botón para cambiar al modo foto, en la esquina superior izquierda verá el icono .

Pulse una vez más para entrar en el modo de visualización de foto y video. Por último vuelva a pulsar para acceder al menú Configurar.

Cuando haya terminado de grabar videos y realizar fotos puede exportar los archivos a su ordenador mediante un cable USB o extraer la tarjeta micro SD e insertarla en un lector de tarjetas.

En el menú configurar pulse Arriba / Abajo para desplazarse por las diferentes funciones y opciones.

- Resolución de video.
- Resolución de foto.
- Tiempo de tomar imágenes: Activa el temporizador para hacer fotos.
- Secuencias: Permite realizar varias capturas en corto espacio de tiempo.
- Marca de tiempo.
- Detección de movimiento: El video se detiene automáticamente tras varios segundos de inactividad. Tras percibir movimiento, la grabación se reanuda.
- Grabación Loop: Los videos se grabarán en bucle durante un tiempo específico seleccionado. Cada video se grabará encima del anterior.
- Grabación de audio.
- Valor de exposición: Regular para aplicar la intensidad de la luz adecuada.
- Borrar.
- Protección.
- Formato.
- Idioma.
- Volumen.
- Apagado automático.
- Salvapantallas.
- Restaurar configuración.
- Frecuencia.
- Ajuste del tiempo.
- Rotación de la imagen.
- Versión del software.

3. Advertencias:

1. No la esponja a la lluvia o entornos mojados sin la carcasa protectora.
2. No exponga la unidad a objetos con fuertes campos magnéticos, tales como imanes o motores eléctricos.
3. Evite caídas que le puedan generar serios daños.
4. No intente reparar la unidad por su propia cuenta, contacte con un especialista.
5. Para evitar riesgos, no se deshaga de él de manera inapropiada.
6. Limpíela con un trapo seco.
7. No la instale cerca de fuentes de calor o luz solar directa.
8. No inserte ningún objeto metálico en la unidad, existiría la posibilidad de un cortocircuito.
9. Mantenga el producto fuera del alcance de los niños.



Importado por: MKTO CATAL IMPORTACIONES S.L., Ctra. De Huerca-Overa, s/n, 04640, Púlp, Almería, Spain.

5246_Sport Camera (Eng) User Manual



It is recommended to read this user manual carefully and keep it for future reference.

1. General Overview.


Before using this device read and follow the user and installation instructions carefully.

Sport camera Komir will let you record exciting moments in high definition and share your more entertaining experiences.

In this set there are many accessories included to enjoy your favorite sports and obtain the maximum potential of your camera.

Main characteristics:

- Waterproof case up to 30m.
- 2 Inches LCD (Liquid Crystal Display) screen.
- Detachable 900mAh Lithium ion battery easy to replace.
- Up to 90 minutes recording time.
- Video recording and pictures while charging.
- 120° HD wide-angle lens.
- Compatible with micro SD cards up to 32GB.
- Real Video quality 720 pixels (p).
- Pictures up to 12 Megapixels (Mp).
- Compact size and available in black, silver and white.
- Interface in 12 languages.

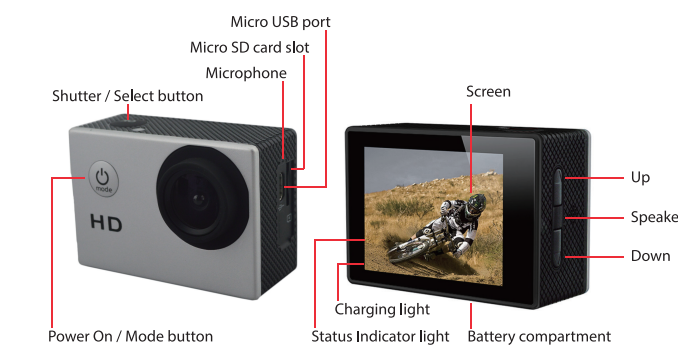

To open the case, press in the direction of the arrows at the same time.

Accessories included:



2. Instructions for Use:

Prior to using the camera for the first time fully charge the battery. Connect Micro USB cable into your USB port or into the wall with a USB power adapter socket.

Press Power On / Mode button for 3 to 5 seconds to start using your camera. A video camera icon will appear in the upper left corner of the screen. In this mode you will be able to record videos.

Press again to switch to picture mode, there will be an icon in the upper left corner of the screen.

Push the button once again to enter the video and picture display mode. Finally press again to have access to Set up mode.


After you have finished recording videos and taking pictures use a USB cable to export the files onto a computer or insert the micro SD card into a card reader.

In the Set Up menu press Up and Down to scroll through the different functions and options.

- Video resolution.
- Picture resolution.
- Time taking pictures: Set the countdown timer to take pictures.
- Burst: Set this option to take a quick succession of pictures.
- Time stamp.
- Motion detection: Video recording stops automatically after around 30 seconds of camera inactivity. After perceiving movement, video recording will restart.
- Loop recording: Videos will be recorded continuously during a specific period of time. The recording process continues to record at the beginning, erasing the previously recorded material and replacing it with the new content.
- Audio recording.
- Exposure value: Adjust to control the appropriate light intensity.
- Delete.
- Protection.
- Format.
- Language.
- Volume.
- Automatic shutdown.
- Automatic off-screen.
- Reset to defaults.
- Frequency.
- Time setting.
- Image rotation.
- Software version.

3. Warnings:

1. Do not expose this product to the rain or damp conditions without a waterproof case.
2. Do not expose the unit to strong magnetic objects, such as magnet, and electrical motors.
3. Prevent this item from falling as it could result in serious damage.
4. Do not dismantle, repair or modify this product by yourself, contact an authorized specialist.
5. In order to avoid any risk, do not dispose of this product inappropriately.
6. Clean the camera with a dry cloth.
7. Do not place this item near sources of heat or expose to direct sunlight.
8. Do not insert any metal object into this device as there is a risk of causing a short circuit in the unit.
9. Keep the product out of children's reach.

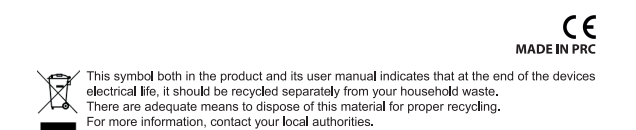

Importado por: MKTO CATAL IMPORTACIONES S.L., Ctra. De Huerca-Overa, s/n, 04640, Púlp, Almería, Spain.