
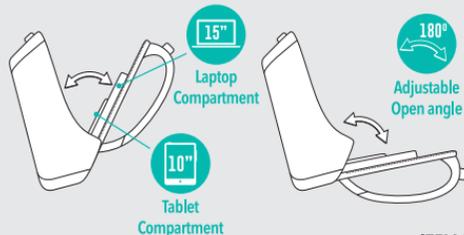
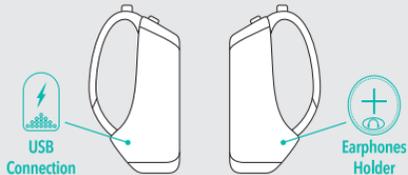


# ANTI-THEFT BACKPACK

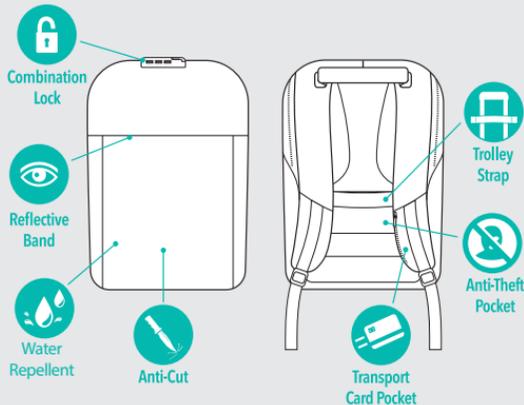

ITEM 5949

## INSTRUCTIONS FOR USE

The lock is pre-set at 0-0-0.

To change the code, follow the below instructions:

- Push the button in the direction of the arrow.
- While in the position set each number to your selected combination code.
- Release the button and your number is now set.
- Take care when setting the numbers not to release the button.
- Change the numbers to secure the lock and later re-enter your selected code to open.

## INSTRUCCIONES DE USO

La combinación por defecto es 0-0-0.

Para cambiarla, siga los siguientes pasos:

- Presionar el botón en la dirección de la flecha.
- En esta posición, colocar cada número de la combinación elegida.
- Soltar el botón y la combinación será ahora la seleccionada.
- Tener cuidado de no soltar el botón mientras se selecciona la combinación.
- Cambie la combinación para bloquear el candado. Para abrirlo, introduzca la combinación seleccionada previamente.

